


30" ELECTRIC FREESTANDING SELF CLEAN RANGE


COOKTOP PARTS
For Models: RF261PXSW0, RF261PXSQ0, RF261PXST0
(White) (Designer White) (Designer Biscuit)

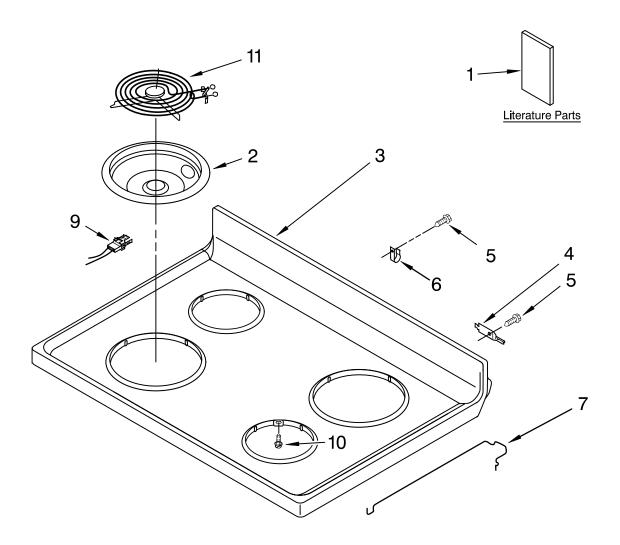

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature	2		Bowl, Drip	5	3196178	Screw (2)
	9762996	Instructions		3195208	6" Chrome (2)	6	308605	Relief, Strain
		Installations		3195209	8" Chrome (2)	7	3195812	Rod, Support (2)
		Template, Anti-Tip	3		Cooktop	9	814399	Receptacle, Elmnt
	9757142	English/Spanish		3186231		10	3196154	Screw
	9757143	English/French		8272527	Biscuit	11		Element, Surface
	9763001	Owners Manual	4	3195060	Hinge, Cooktop (2)		9761347	6" (2)
	9762976	Tech Sheet			3 - / · · · · · · · · ·		9761345	8" (2)
	9762761	Safer Cooking Tips						• •

CONTROL PANEL PARTS


For Models: RF261PXSW0, RF261PXSQ0, RF261PXST0 (White) (Designer White) (Designer Biscuit)

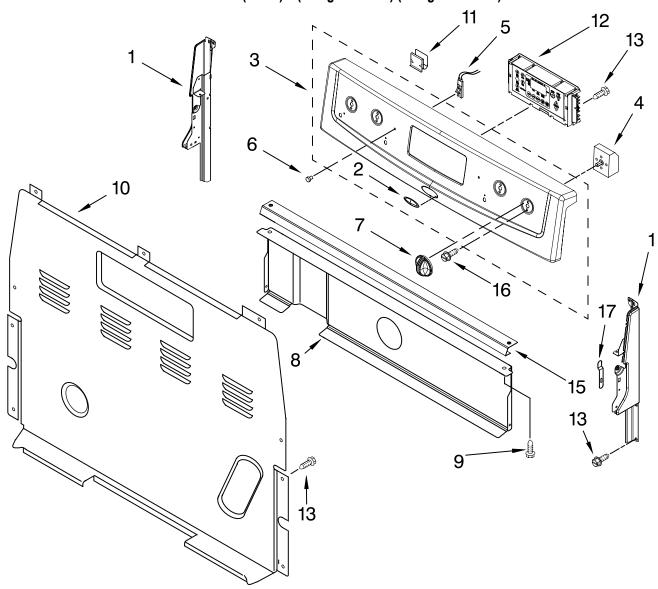

Illus No.		DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Endcap	5		Light, Indicator	10	8272473	Cover, Upper
	W10009040	White Left Hand		8523265	Surface Unit (2)	11	8273564	
	W10009050	White Right Hand	6		Lens, Light (3)	12		Control, Range
	W10009060	Biscuit Left Hand	7		Knob, Infinite (4)		9762184	
	W10009070	Biscuit Right Hand		9761962	White		9762186	Biscuit
	W10009080	Black Left Hand		9761963	Biscuit		9762185	Black
	W10009090	Black Right Hand		9761964	Black	13	3196178	Screw
2	9757609	Nameplate	8	8053912	Shield, Heat	15	9762095	Brkt-Mntg, Console
3		Panel, Control	9		Screw	16	3400882	
	9762015	White		3196166	White	17	3196200	Clip, Spring (2)
	9762016	Biscuit		8281194	Biscuit			1, 1 3()
	9762017	Black		3196168	Black			
4		Switch, Infinite						
	3148954	•						
	3148952	LR/RF						

CHASSIS PARTS

For Models: RF261PXSW0, RF261PXSQ0, RF261PXST0 (White) (Designer White) (Designer Biscuit)

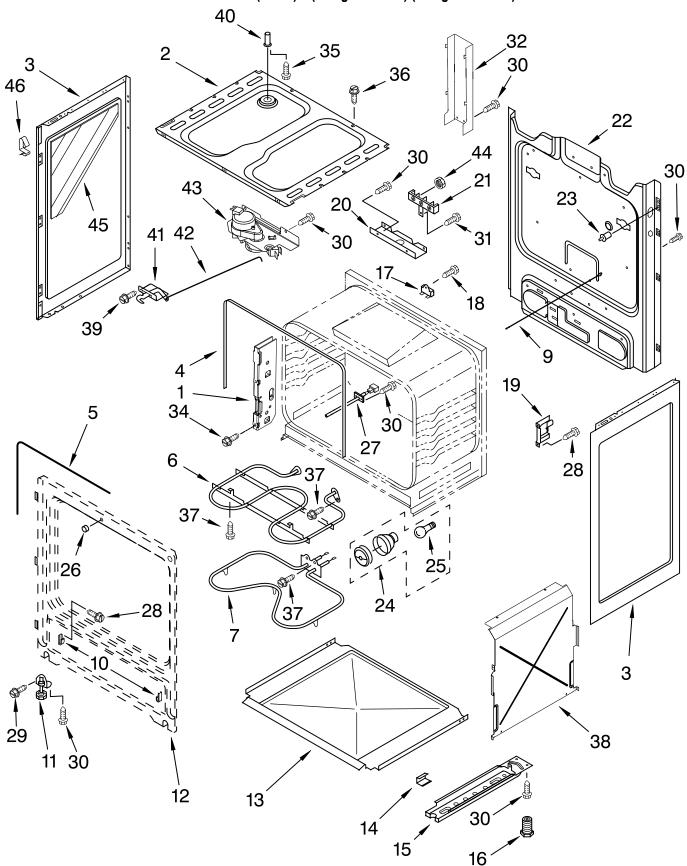

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


CHASSIS PARTS
For Models: RF261PXSW0, RF261PXSQ0, RF261PXST0
(White) (Designer White) (Designer Biscuit)

Illus No.		DESCRIPTION
1 2 3	9760407 3186144	Brkt – Mounting Box, Burner Panel, Side (2) Incl Side Foil #45
4 5 6 7 9 10 11 12	8053830 8272519 W10010350 8522416 9757340 9758541 9757239 9759785 3196037	White Biscuit Seal, Oven Flange Seal, Oven Door Element, Broil Element, Bake Rod – Dr Switch Glide, Drawer Frnt Foot, Front (2) Frame, Front (Not Serviced)
13 14 15 16 17 18 19 22 22 22 22 22 22 23 33 33 33 33 44 44 44 45 46	8054068 3196576 9760314 9761935 3196548 3196172 3186116 3186034 9761958 8274034 9757262 3196701 311255 9758701 8273902 3196169 3196179 3196178 3400016 9758283 W10031780 3196567 W10033260 3196174 9758238 3196560 9755804 9761013 3196961 9757241 112432 9761490 3195813	Tray, Insulation Clip, Panel (6) Rail, Base (2) Foot, Rear (2) Thermal, Fuse Screw Support, Oven (2) Bracket, Service Block, Terminal Back, Main Switch, Door Light Socket Assy Bulb, Oven Light Spacer – Door Sensor, Oven Screw Sc

INSULATION

8272616 Insulation, Wrap 8272612 Insulation, Back


DRAWER & BROILER PARTS
For Models: RF261PXSW0, RF261PXSQ0, RF261PXST0
(White) (Designer White) (Designer Biscuit)

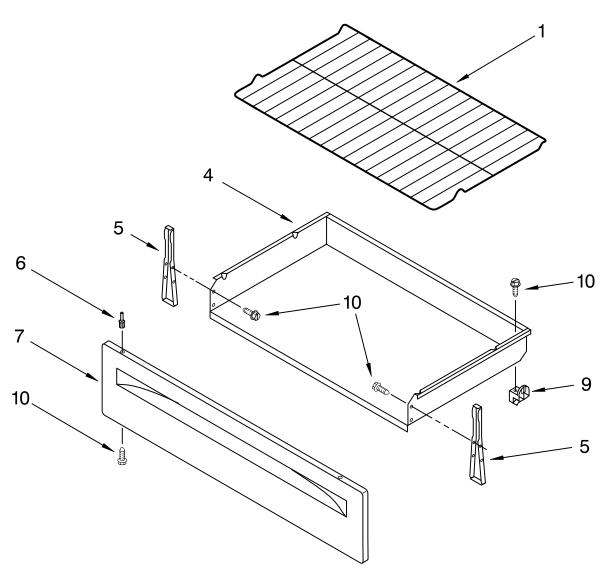

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
4	9761030	Drawer, Storage
5	9758200	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196815	Almond
7		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
9	8053334	Glide, Drawer (2)
10	3196168	Screw

DOOR PARTS

For Models: RF261PXSW0, RF261PXSQ0, RF261PXST0 (White) (Designer White) (Designer Biscuit)

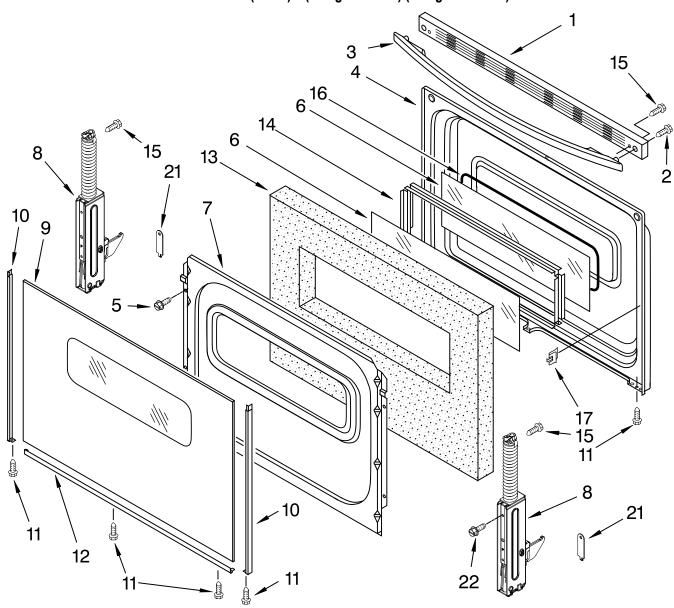

Illus No.		DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus No.	. Part No.	DESCRIPTION
1		Trim, Top	8	9761493	Hinge, Door (2)	11	3196160	Screw
	9761975	White	9		Glass, Outer	12		Trim, Lower
	9761976	Biscuit		9762476	White		8523175	White
	9762391	Black		9762478	Biscuit		8523178	Biscuit
2	3196164	Screw		9762477	Black		8523177	Black
3		Handle, Door	10		Trim, Side	13	8272618	Insulation
	9761982	White		8523172	White Left Hand	14	3186290	Frame, Window
	9761984	Biscuit		8523166	White Right Hand	15	W10031780	Screw
	9761983	Black		8523173	Biscuit Left Hand	16	8522415	Seal, Window
4	9761340	Liner, Door		8523167	Biscuit Right Hand	17	3196025	Clip, Glass (6)
5	W10031790	Screw			Black Left Hand	21		Clip, Dr Mntg (2)
6	9758164	Window, Inner		8523165	Black Right Hand	22	3196165	
7	9761499	Retainer, Insul.	1		S			

OPTIONAL PARTS (NOT INCLUDED)

For Models: RF261PXSW0, RF261PXSQ0, RF261PXST0 (White) (Designer White) (Designer Biscuit)

No. No. DESCRIPTION

Following Parts Not Illustrated

SPLICING WIRES--25FT.

Part

LENGTH

Illus.

242828 Wire, Black 12 Ga. 150° c 242821 Wire, Blue 14 Ga. 150°c 242822 Wire, Brown 14 Ga. 150°c 242830 Wire, Brown 14 Ga. 200°c 242823 Wire, Green 14 Ga. 150°c 242824 Wire, Orange 14 Ga. 150°c 242825 Wire, Red 14 Ga. 150°c 242831 Wire, Red 14 Ga. 200°c 242827 Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

799832 Kit, Porcelain Repair (White) 242756 Touch–Up Self–Clean(1/2 Pt) 261582 Grease Illus. Part No. No. DESCRIPTION

INSULATION

261514 Insulation, Fiberglass (1–1/2" x 24" x 120") 240132 Insulation, Fiberglass (2–1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017 White 4392899 Biscuit 511873 White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930 White 4392901 Biscuit 285006 Superior Black 206922 Primer (White)

PAINT, BULK (1 qt.)

799344 White (Uncut) 4392900 Biscuit(Uncut) Illus. Part
No. No. DESCRIPTION

ACCESSORY PARTS

241430 Foil, Aluminum Oven (18" x 25') 3191048 Cleaner, Glass 4396923 Pan, Broiler

ANTI-TIP KIT

W10017440 Anti-Tip Kit

WIRING HARNESS PARTS

9762428 Harness, Wire
(Sensor/Dr Switch)
311227 Wire, Ground
3196154 Screw
9762952 Harness, Wire
(Main)
313660 Clip, Wire Ground
3196173 Screw
8524114 Relief, Strain
8524132 Shield, Wiring
3196174 Screw
(Grnd Wire / Back)

8188345 7